




# Super Nintendo Power Switch Replacement

This guide shows how to remove the power switch connected to the motherboard.

Written By: Cameron Deines

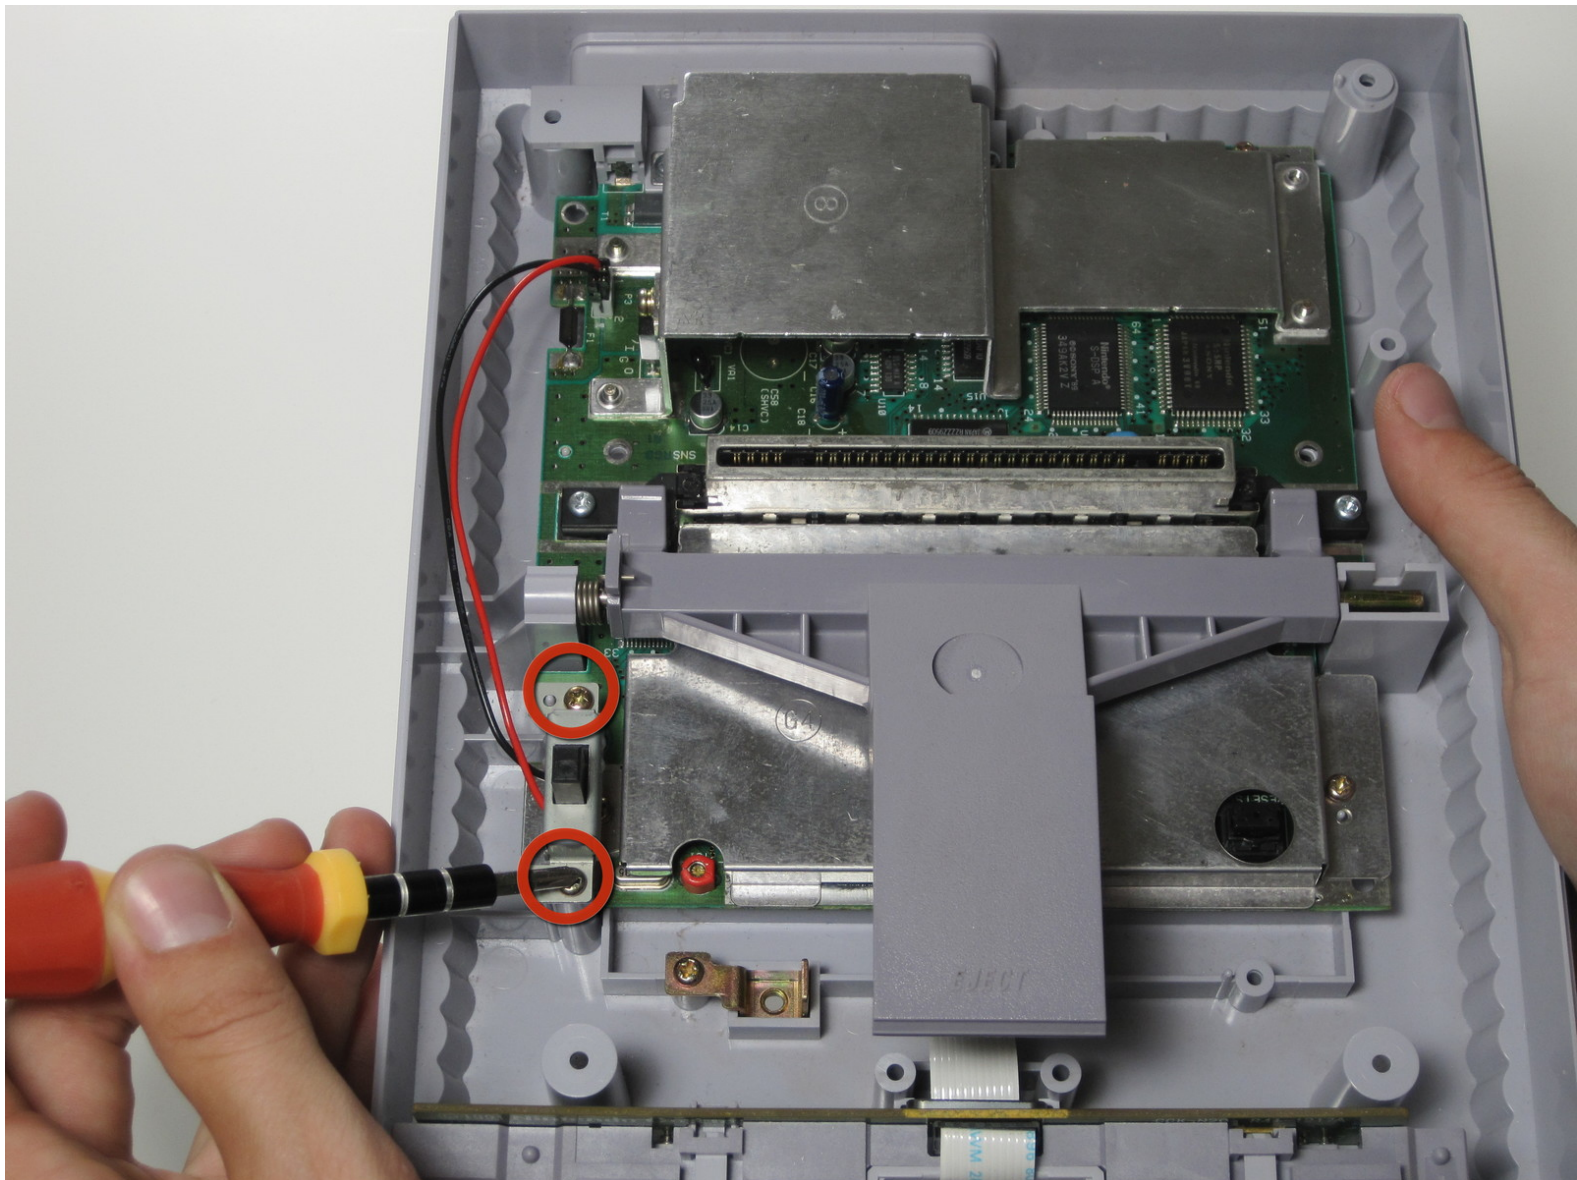

## INTRODUCTION

This guide will show you how to remove the power switch connected to the motherboard. Steps can be followed in reverse to install a new power switch.



### TOOLS:

- [Gamebit 4.5mm](#) (1)
- [Phillips #2 Screwdriver](#) (1)



### PARTS:



- [Super Nintendo Power switch](#) (1)
-

## Step 1 — Outer Case



- Remove the six screws located on the underside of the system using the Gamebit 4.5mm screwdriver.


## Step 2

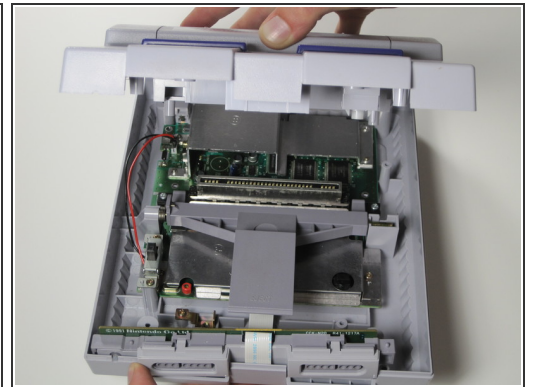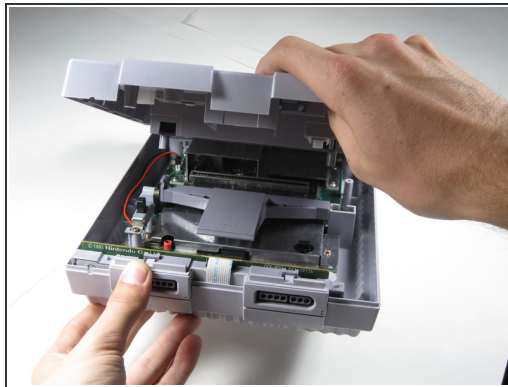

- Carefully flip the unit back over.
- Locate the seam. Lift and separate the upper half of the case from the lower half of the case.




### Step 3 — Power Switch

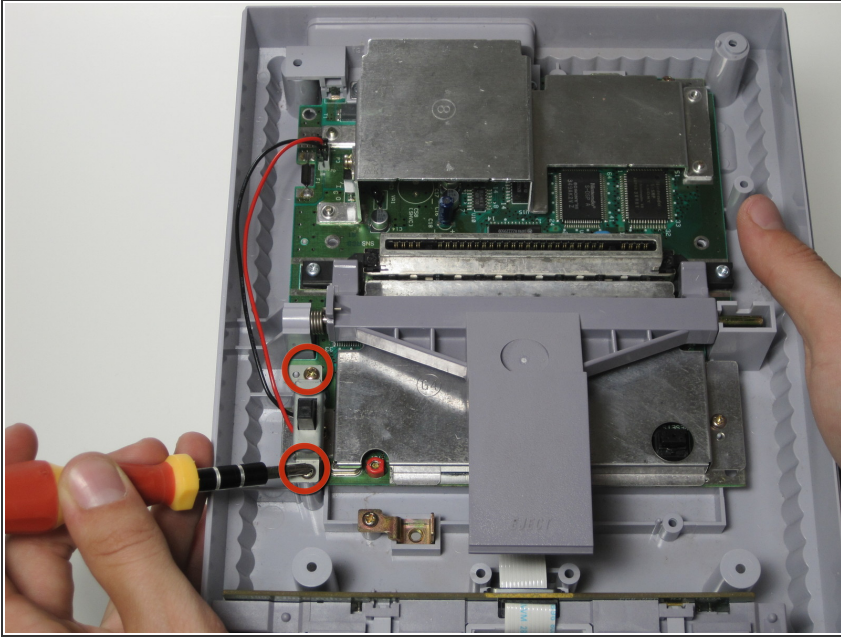

- Remove the two 11.7 mm Phillips #2 screws connecting the power switch to the motherboard.

### Step 4

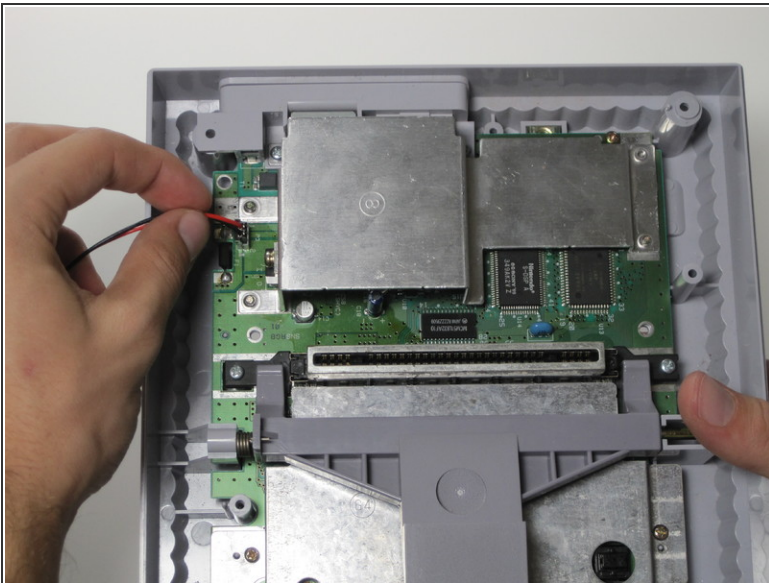

- ⓘ The power switch is connected to the motherboard near the top left of the console.
- Carefully pull the connector from its socket on the motherboard. You may need to wiggle it out as you pull.
- ⚠ Do not detach the connector by pulling on the wires. This could damage the wires or the socket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 01:02:26 AM.